

Engine Servicing With Air Conditioning

With the air conditioning refrigerant lines on the right side of the engine compartment it permits removal of the compressor for engine servicing without

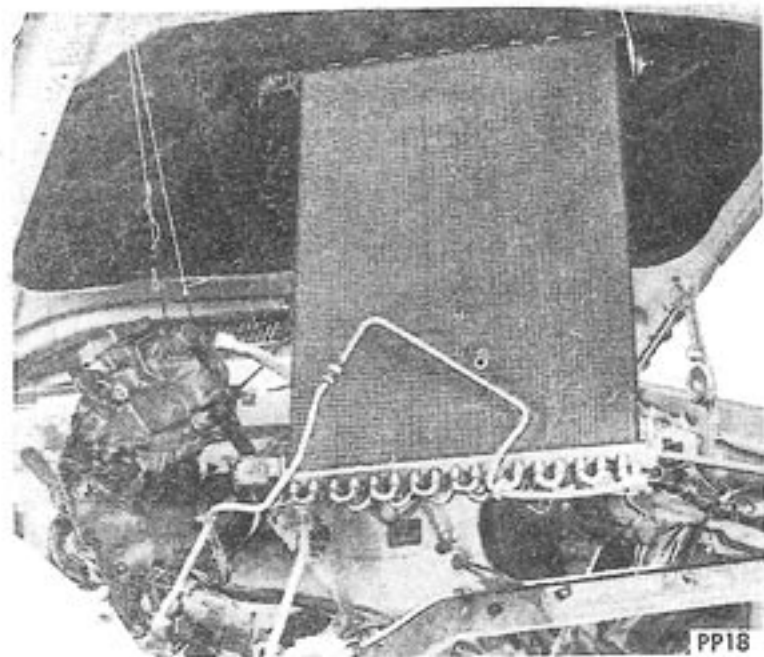


Fig. 1—Air Conditioning Compressor and Condenser Set to One Side

releasing the refrigerant charge. When compressor is set to the right side do not tilt, keep in upright position (Fig. 1). When reinstalled on engine, turn compressor pulley several complete revolutions by hand to be sure that all oil is back in compressor oil sump before installing belts and running engine. The Air Conditioning condenser can also be set to right side for engine servicing.